



BC 750 S4 – Anbausätze / fitment kits


Mercedes-Benz Sprinter

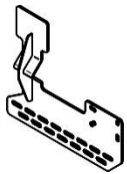


kurz / short
AWD + RWD
wheelbase 3665 mm
+ twin wheels or
4325 mm




mittel / middle
AWD + RWD
wheelbase 3665 mm
or 4325 mm



lang / long
All Sprinters possible




kurz Hülse / short
AWD + RWD
wheelbase 4325 mm
Sprinter 3xx / 4xx




mittel Hülse / middle
AWD + RWD
wheelbase 3665 mm /
4325 mm
Sprinter 3xx / 4xx


Volkswagen Crafter / MAN TGE

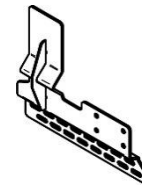


kurz / short
single wheels

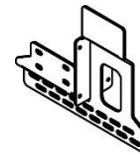

lang / long
single wheels

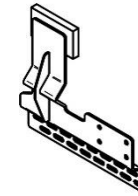


kurz Do / short
twin wheels

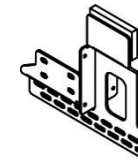


lang Do / long
twin wheels

Renault Master

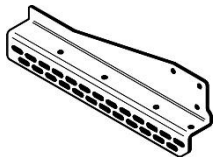


kurz / short
L3 / L4
twin wheels

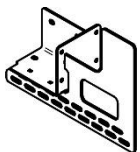


lang / long
L2 / L3 / L4


Iveco Daily

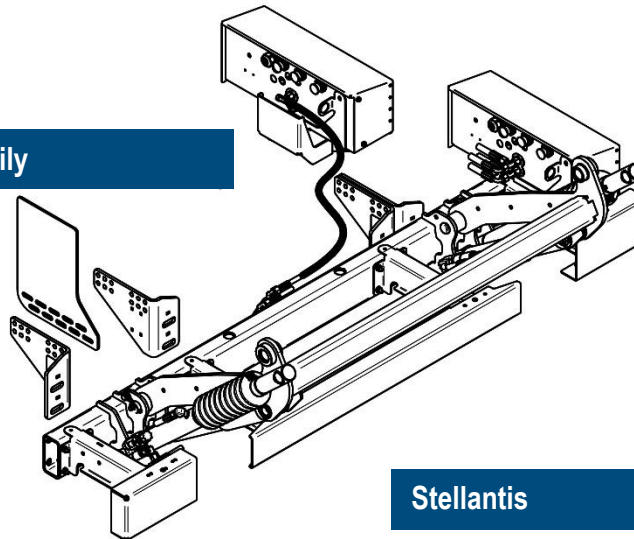

Ford Transit

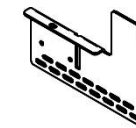

L1 / L2 / L3

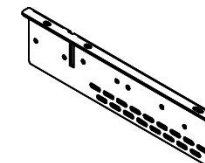

L4 / L5

Stellantis

